




1-800-295-5510

uline.com

CORRUGATED FRAME PROTECTOR

ASSEMBLY INSTRUCTIONS

1. Remove individual frame protectors from sheet.
2. Place white surface down.
3. Fold at 1, 2 and 3.
4. Insert tab into slot.
5. Be sure that triangular tabs from fold 1 are inside the finished protector.

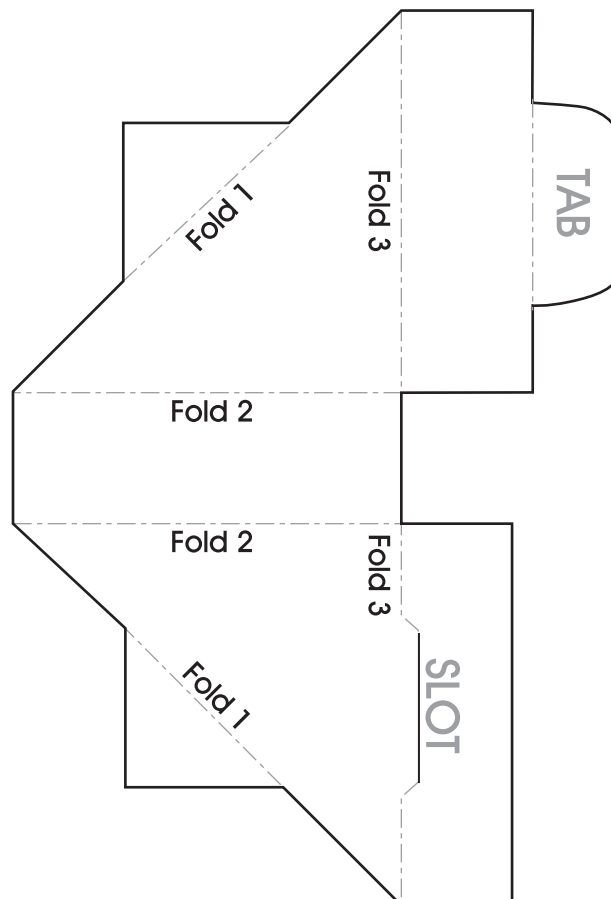

ULINE CHICAGO • ATLANTA • DALLAS • LOS ANGELES • MINNEAPOLIS • NYC/PHILA

1-800-295-5510

uline.com